


QM-Form (5368 / 2018-05-29 vl): qm\_allg\_txt\_en.odt

<p>1. The incidentals and their numbers are shown on the right.</p>	<p>(similar picture)</p>
<p>2. Tighten the two screws (7) with the adapter cover.</p>	<p>(similar picture)</p>
<p>3. Remove first the front bracket of your PCI Express Card. Push the express card through the front of the EA4 (from right to left).</p>	<p>(similar picture)</p>
<p>4. Plug in carefully the Express Card in the Express Card Slot of the EA4.</p>	<p>(similar picture)</p>

If the mounting holes in the front of your Express Card have not the conformal position of PCI Express Card Specification, you have to go on with the steps 7 to 9.


Otherwise, if your mounting holes are conformal to the PCI Express Card Specification, go on with step 5 + 6 and leave the steps 7 + 9.

5. Lay the two jackets (5) between the the bracket of the express card and the EA4.

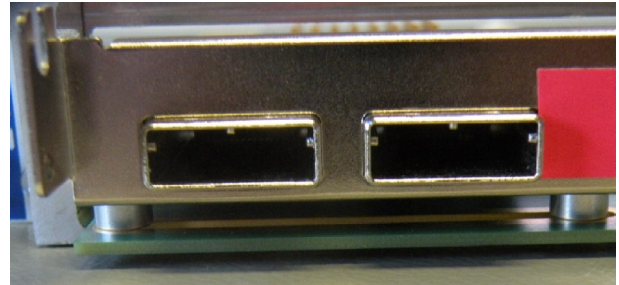


(similar picture)

6. Tighten the two screws (3) from the bottom in the Express Card bracket.  
Lay the washer (1) and the snap ring (2) on the screws (3) and tighten the screw nut (4).

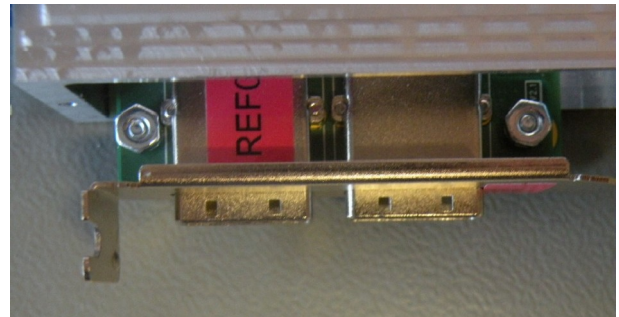


(similar picture)

7. Lay the two mounting cubes (8) between the the bracket of the express card and the EA4.  
**The notch of the cubes have to be on the Top side, so that the screw thread of the bracket fit into the notch.**

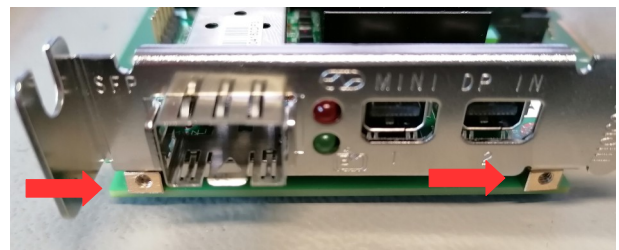


(similar picture)

8. Tighten the two screws (10) from the Top of the PCI Express Card.

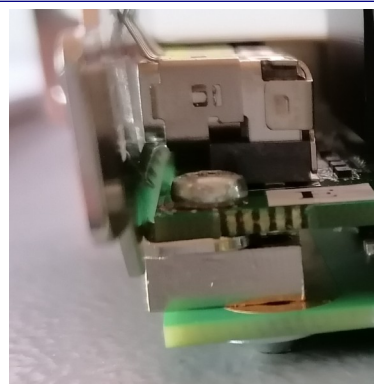


(similar picture)

9. Lay the two washers (9) on the bottom of the EA4 and tighten the two screws (11) with the mounting cubes.

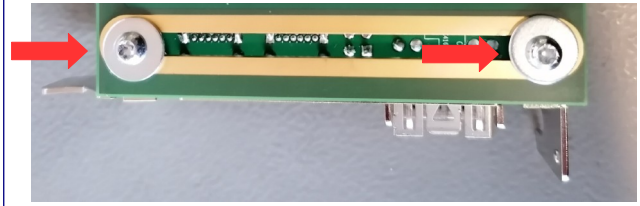


(similar picture)

10. Put the front hood on the bracket cover. Then tighten the two screws (6) to fix the front hood.

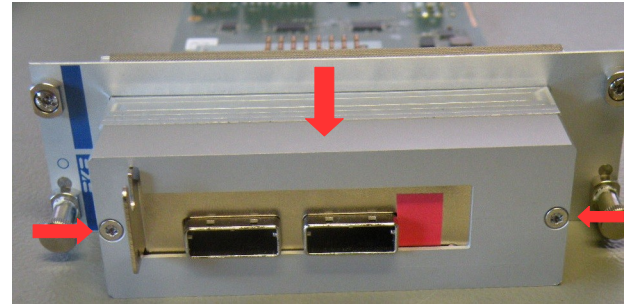

(similar picture)

11. The final installation of the card:

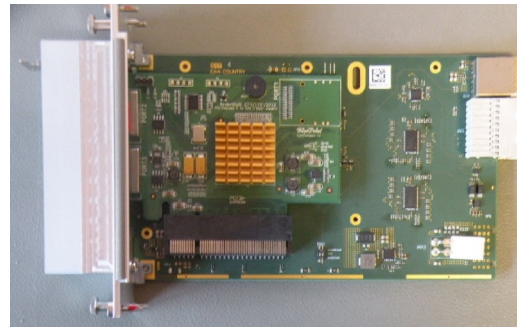

(similar picture)